

Bedienungsanleitung Operating instructions

01.2015

Digital 506

Digital 564

Digital 572

Digital 633

Digital 663



D Bedienungsanleitung



1. Produktübersicht

1.1 Legende

- 1 LED-Anzeige
- 2 Statustaste
- 3 Funktionstasten
- 4 Programmiertaste

1.2 LED-Anzeigen

- a LED aus
- b LED leuchtet
- c LED blinkt langsam
- d LED blinkt schnell

2. Inbetriebnahme

2.1 Funktionstasten programmieren

2.2 Funktionstasten kopieren

Funktionen eines bereits eingelernten Geräts (A) auf ein Weiteres (B) übertragen. Beide Hand-sender müssen sich in Reichweite des Antriebs oder der Steuerung befinden. Nicht möglich bei Universalempfängern.

GB Operating instructions



1. Product overview

1.1 Legend

- 1 LED display
- 2 Status button
- 3 Function keys
- 4 Programming button

1.2 LED displays

- a LED off
- b LED on
- c LED flashes slowly
- d LED flashing quickly

2. Setting in operation

2.1 Programme the function keys




2.2 Copy the function keys

Copy the functions of a transmitter (A) that has already been programmed to another transmitter (B). To do so, both transmitters have to be within range of the drive or the control unit. This function does not apply to universal receivers.

1.



Digital 663

   Digital 564




Digital 572

  Digital 506



Digital 633

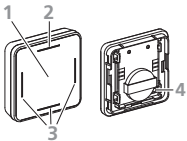

1.1

1



2



3



4



1.2

a



b



c



d



2.

2.1

1.




2.



Digital 506
Digital 633

 3.



30 s

4.



1 x

5.



Digital 506
Digital 633

2.2


1.



A + B

Digital 506
Digital 633

 2.



30 s

3.

 


1 x

4.



5.




30 s

6.



1 x

 7.



8.



A + B

Digital 506
Digital 633

3. Bedienung



3.1 Funktion auslösen

10 x LED blinkt schnell - Batterie wechseln

3.2 Status abfragen

nur Handsender mit Statustaste

3.3 Statusanzeigen

fährt AUF (a) / ZU (b)

ist AUF (c) / ZU (d)

ist in Zwischenposition AUF (e) / ZU (f)

ist an anderer Position (g)

ist außer Reichweite (h)

3.4 Tastensperre einrichten

3.5 Tastensperre kurzzeitig deaktivieren

3.6 Batterie wechseln

Altgeräte und Batterien dürfen nicht mit dem Hausmüll entsorgt werden!

4. Technische Daten

3. Operation



3.1 Activate function

LED flashes rapidly 10 x - Change battery

3.2 Check status

only hand transmitter with status button

3.3 Status displays

Is OPENING (a) / CLOSING (b)

Is OPEN (c) / CLOSE (d)

Is in-between OPENING (e) / CLOSING (f)

Is in another position (g)

Is out of range (h)

3.4 Button lock

3.5 Button lock

 
3.6 Changing the battery

Do not dispose of old equipment or batteries with the normal household waste!

4. Technical data

3.


3.1



3.2



 3.3



g



1 x


h



3.4



 Digital 506
Digital 633



Digital 506
Digital 633

3.5




20 s



1 x

3.6

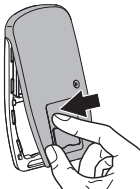

4.



CR2032, 3V



°C

-20



°C

+60



- Digital 564,
572, 633

IP54

- Digital 506, 663


IP20

CE EAC

www.marantec.com



116462

 1 - 0 360423 - M - 0.5 - 0914